
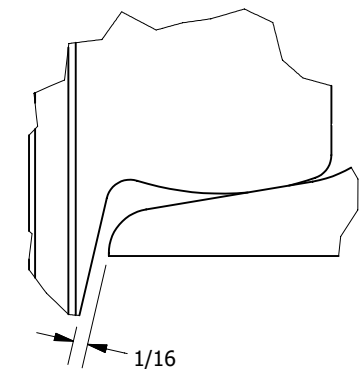
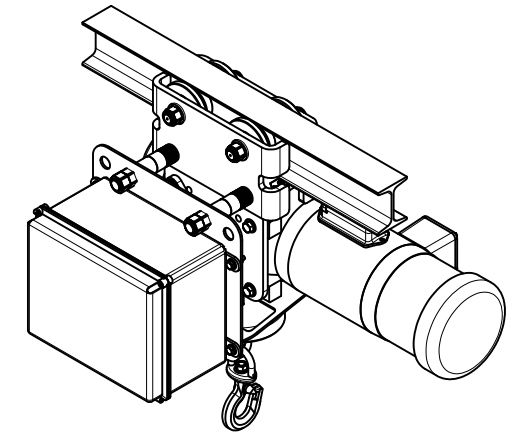
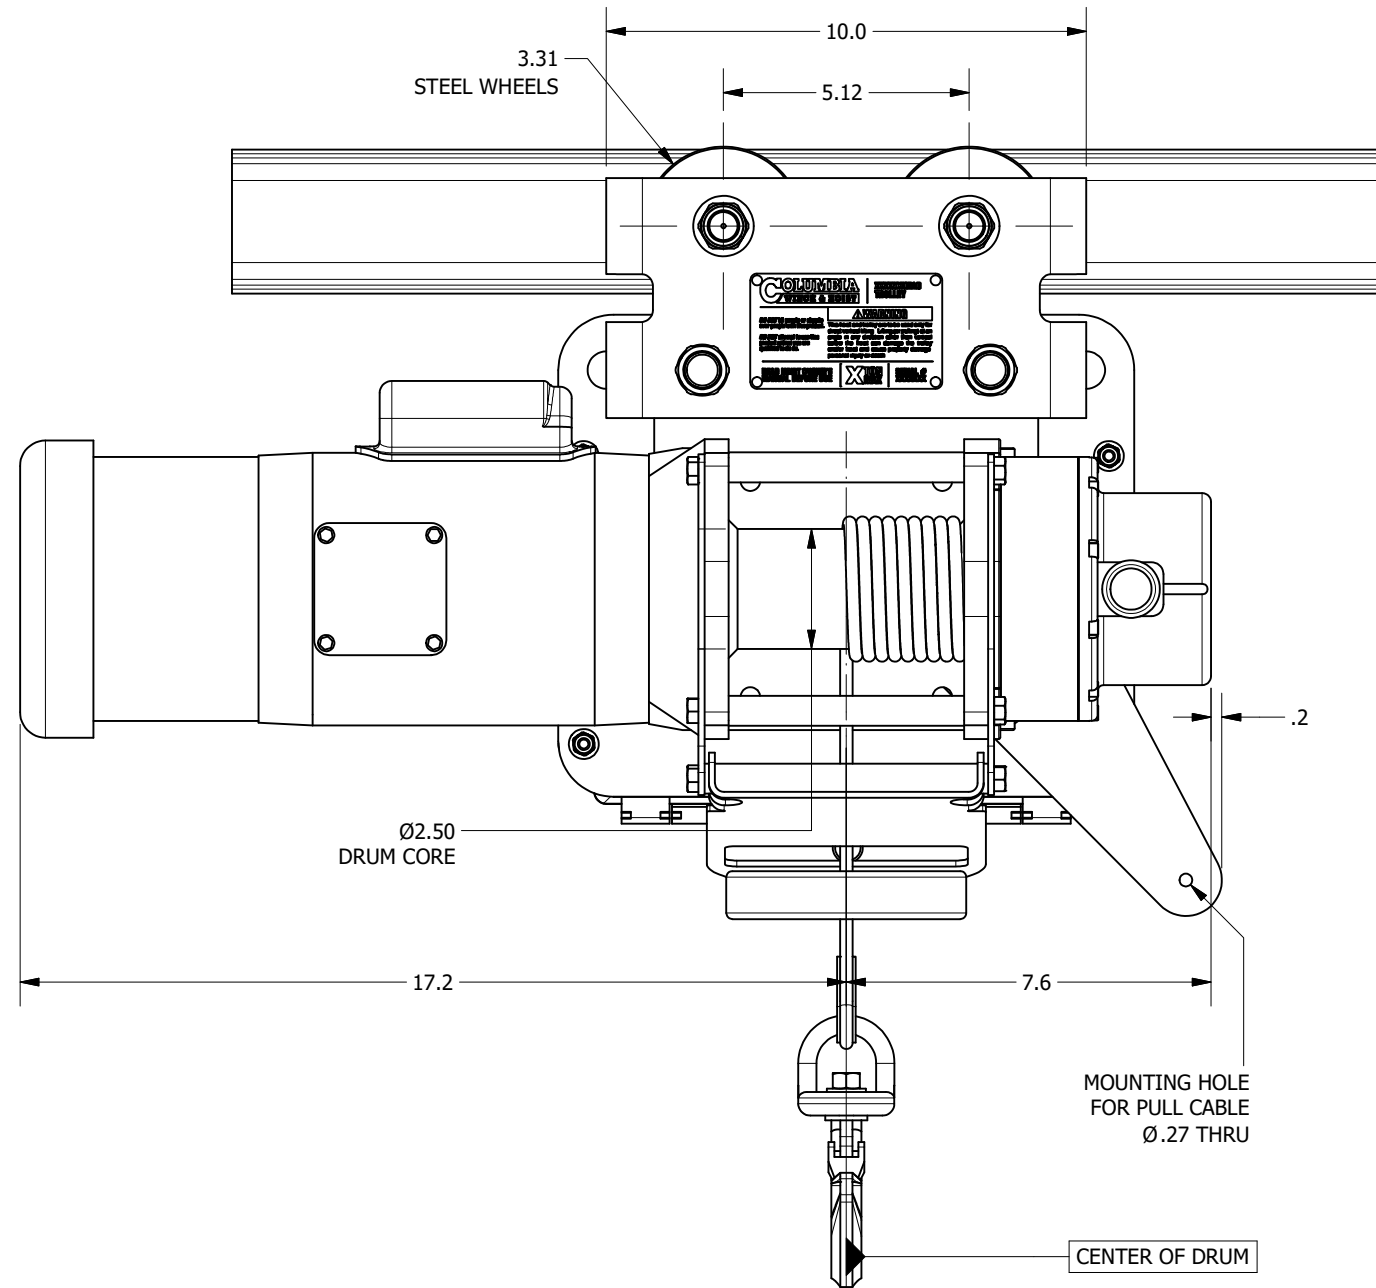


Frame 1 Trolley Dimensions -01/-11 drum with limit switch

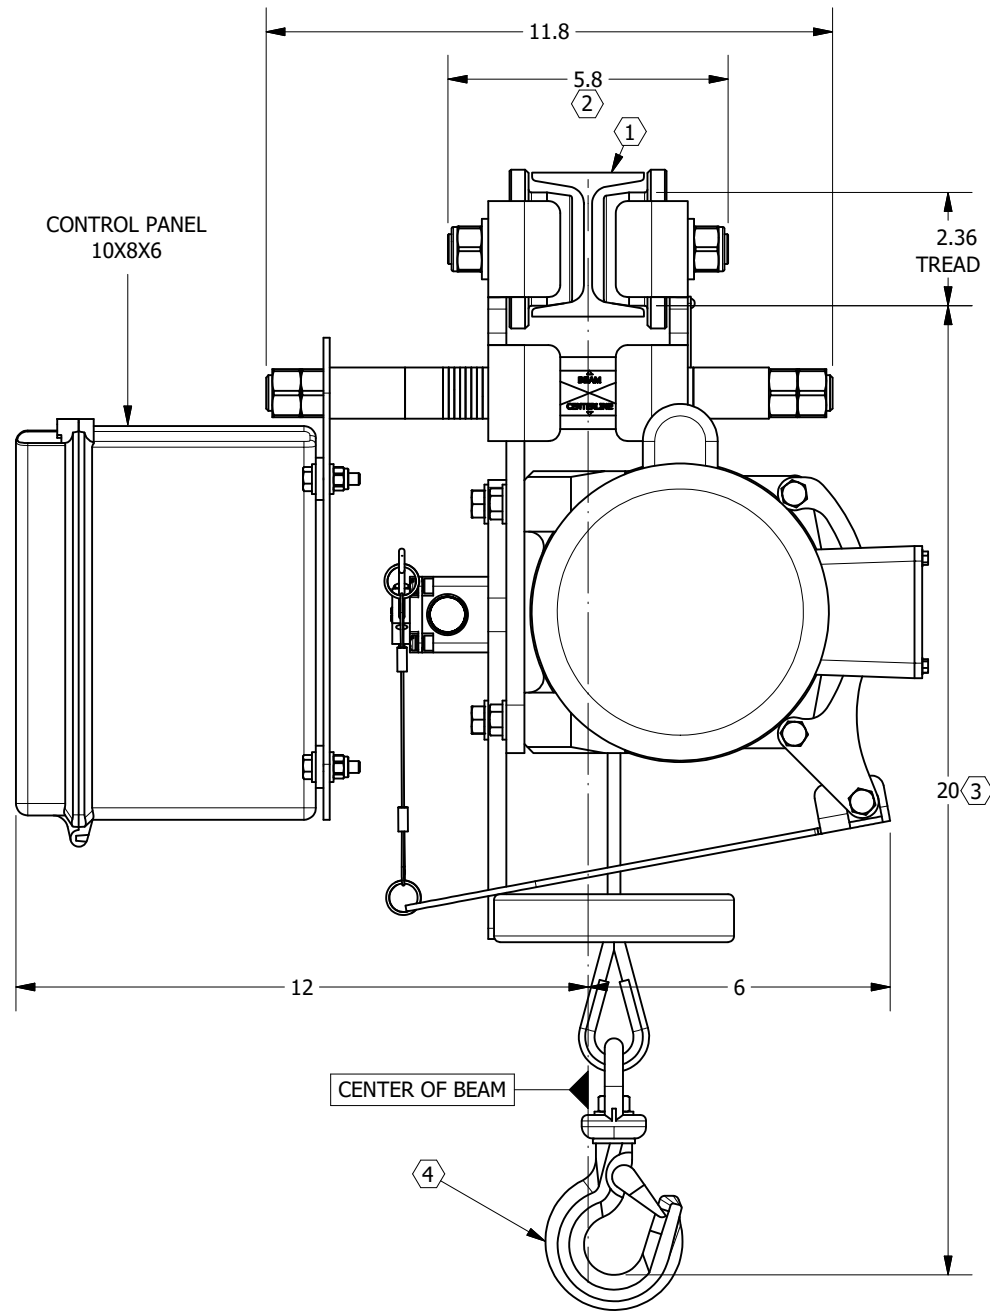

DETAIL A

ADJUSTMENT ILLUSTRATION & INSTRUCTIONS
The correct trolley setting is the beam flange width plus approximately 1/16" running clearance on each side of the flange; the clearance should not exceed 3/16".

Move the spacing washers on either side of the trolley side plates to adjust as required.

After adjustment, tighten the trolley pin nuts and locking nuts securely.

NOTE:

- ①- MINIMUM FLANGE WIDTH, SEE TABLE FOR ACCEPTABLE RANGE OF WIDTH (COMPATIBLE WITH MOST STANDARD & WIDE FLANGE BEAMS)
- ②- DIMENSION VARIES WITH FLANGE WIDTH, SHOWN WITH S3X5.7 I-BEAM
- ③- DIMENSION WHEN HOOK IS FULLY RAISED PRIOR TO ACTUATING LIMIT SWITCH
- ④- WIRE ROPE ASSEMBLY NOT INCLUDED (SHOWN FOR CLARITY)

Working Load*	Minimum Beam Height	I-Beam Width	Net Weight (Approx)
---------------	---------------------	--------------	---------------------

2000 lbs.	3.0"	2.3"-7.3"	110 lbs. w/o hoist motor
-----------	------	-----------	--------------------------

Trolley working load may exceed hoist working load depending on hoist model and wire rope layer. Do not exceed hoist working load.

This print is the property of Allied Power Products, Inc. and may not be used in any manner detrimental to their interest.

© February 2019 - www.alliedpower.com
2B17281R0

ALLIED POWER PRODUCTS, INC.

THE WINCH & HOIST SPECIALISTS

6590 SW Fallbrook Place, Beaverton OR 97008
Toll Free: 800.248.4896 Phone: 503.626.2654 Fax: 503.646.1996